


HOME DECORATORS C O L L E C T I O N

BF-24187 OXFORD COLLECTION 2 DRAWERS FILE CABINET WITH PULL OUT SHELF TOP

INV#87645













ASSEMBLY INSTRUCTIONS




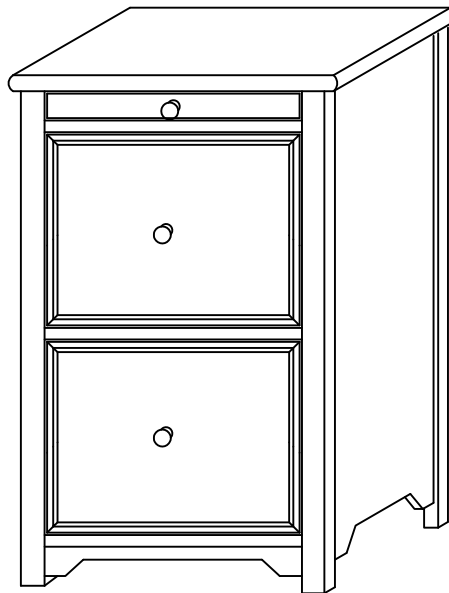




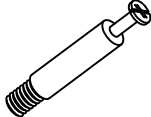

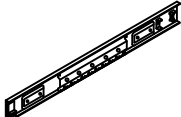
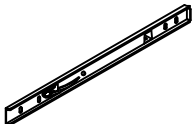
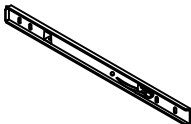

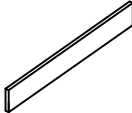
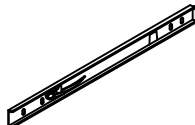
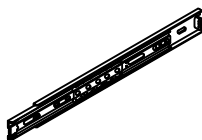




Made In China

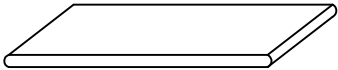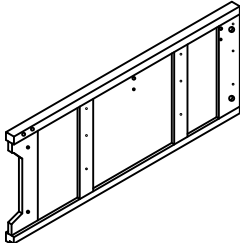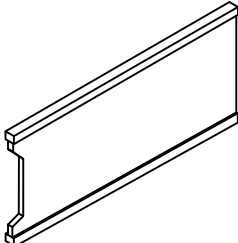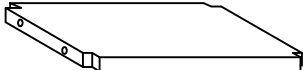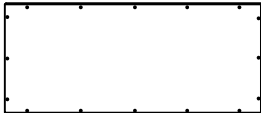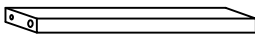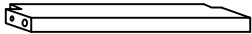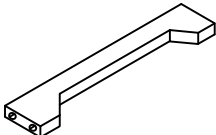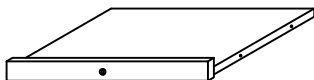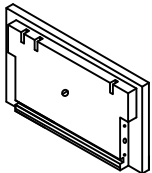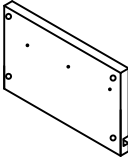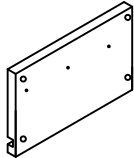

Thank you purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

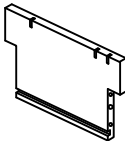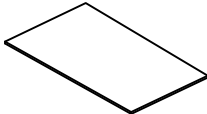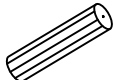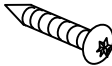
IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST		
A  TOP PANEL-1PC	B  LEFT SIDE PANEL-1PC	C  RIGHT SIDE PANEL-1PC
D  BOTTOM PANEL-1PC	E  BACK PANEL-1PC	F  ACROSS PANEL-1PC
G  ACROSS PANEL-1PC	H  LOW PANEL-1PC	I  SLIDE PANEL-1PC
J  DRAWER PANEL FRONTS-2PCS	K  RIGHT DRAWER PANEL SIDES-2PCS	L  LEFT DRAWER PANEL SIDES-2PCS

M  DRAWER PANEL BACKS-2PCS	N  DRAWER PANEL BOTTOMS-2PCS	O  DOWELS-16PCS	
P  SCREWS-16PCS	Q Fall Down Prevention  SCREWS-18PCS	R  KNOB-1PC	
S  KNOBS-2PCS	T  SCREWS-2PCS	U  CAM-BOLTS-12PCS	
V  CAM-LOCKS-12PCS	W  OUTER SLIDES-2PCS	X  LEFT INNER SLIDE-1PC	Y  RIGHT INNER SLIDE-1PC
Z  CAM-TOOL-1PC	A1  FILE HANGERS-4PCS	B1  INNER SLIDES-4PCS	C1  OUTER SLIDES-4PCS
D1  SCREWS-38PCS	E1 Fall Down Prevention  HOOKS-2PCS	F1 Fall Down Prevention  HANGERS-2PCS	G1 Fall Down Prevention  SCREWS-2PCS


NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

HOW TO SEPARATE GLIDES

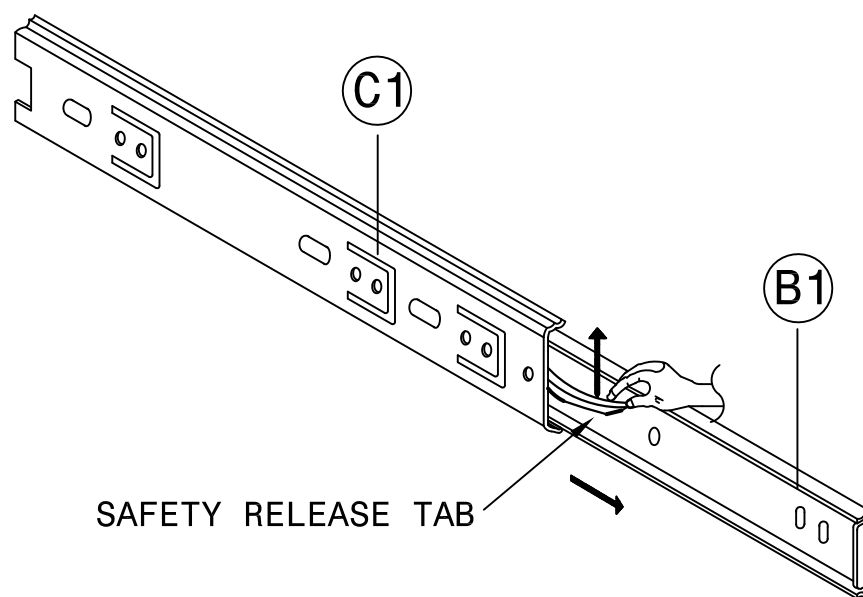



PRIOR TO ASSEMBLY, WE SUGGEST SEPARATING THE INNER GLIDES FROM THE OUTER-GLIDES, SIMPLY PULL THE LEFT/RIGHT INNER GLIDES FROM THE OUTER GLIDES EXPOSING A SMALL BLACK SAFELY RELEASE TAB, BY PUSHING THE SAFETY RELEASE TAB. YOU WILL BE ABLE TO SEPARATE THE GLIDE.

HOW TO SEPARATE GLIDES

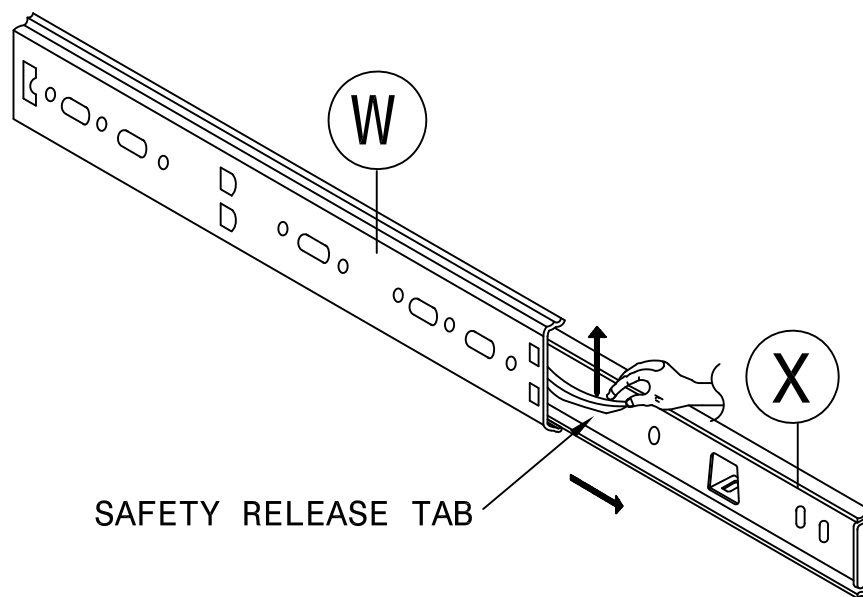




PRIOR TO ASSEMBLY, WE SUGGEST SEPARATING THE INNER GLIDES FROM THE OUTER-GLIDES, SIMPLY PULL THE LEFT/RIGHT INNER GLIDES FROM THE OUTER GLIDES EXPOSING A SMALL BLACK SAFELY RELEASE TAB, BY PUSHING THE SAFETY RELEASE TAB. YOU WILL BE ABLE TO SEPARATE THE GLIDE.

NOTE: • UPON OPENING THOROUGHLY CLEAN ALL WOODS SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

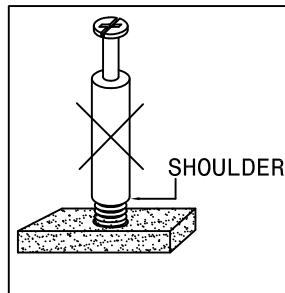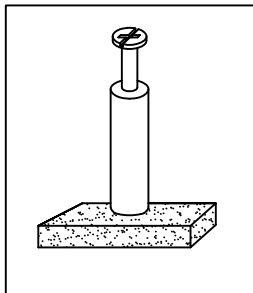


NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

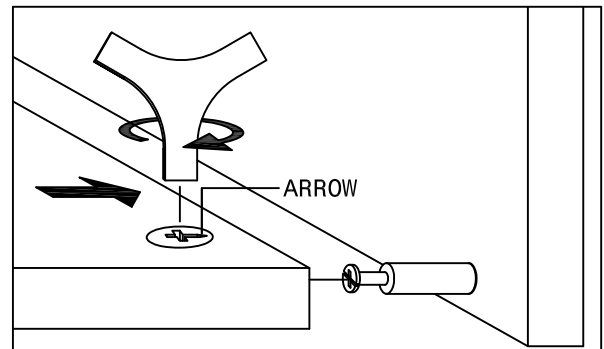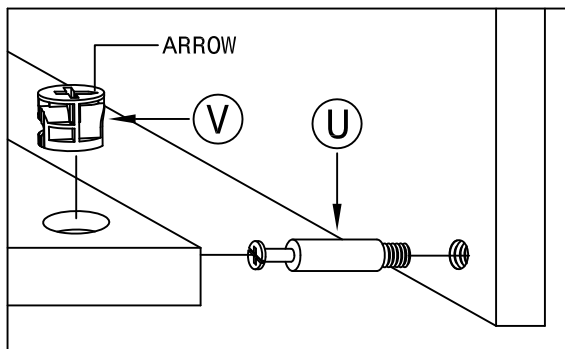


NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

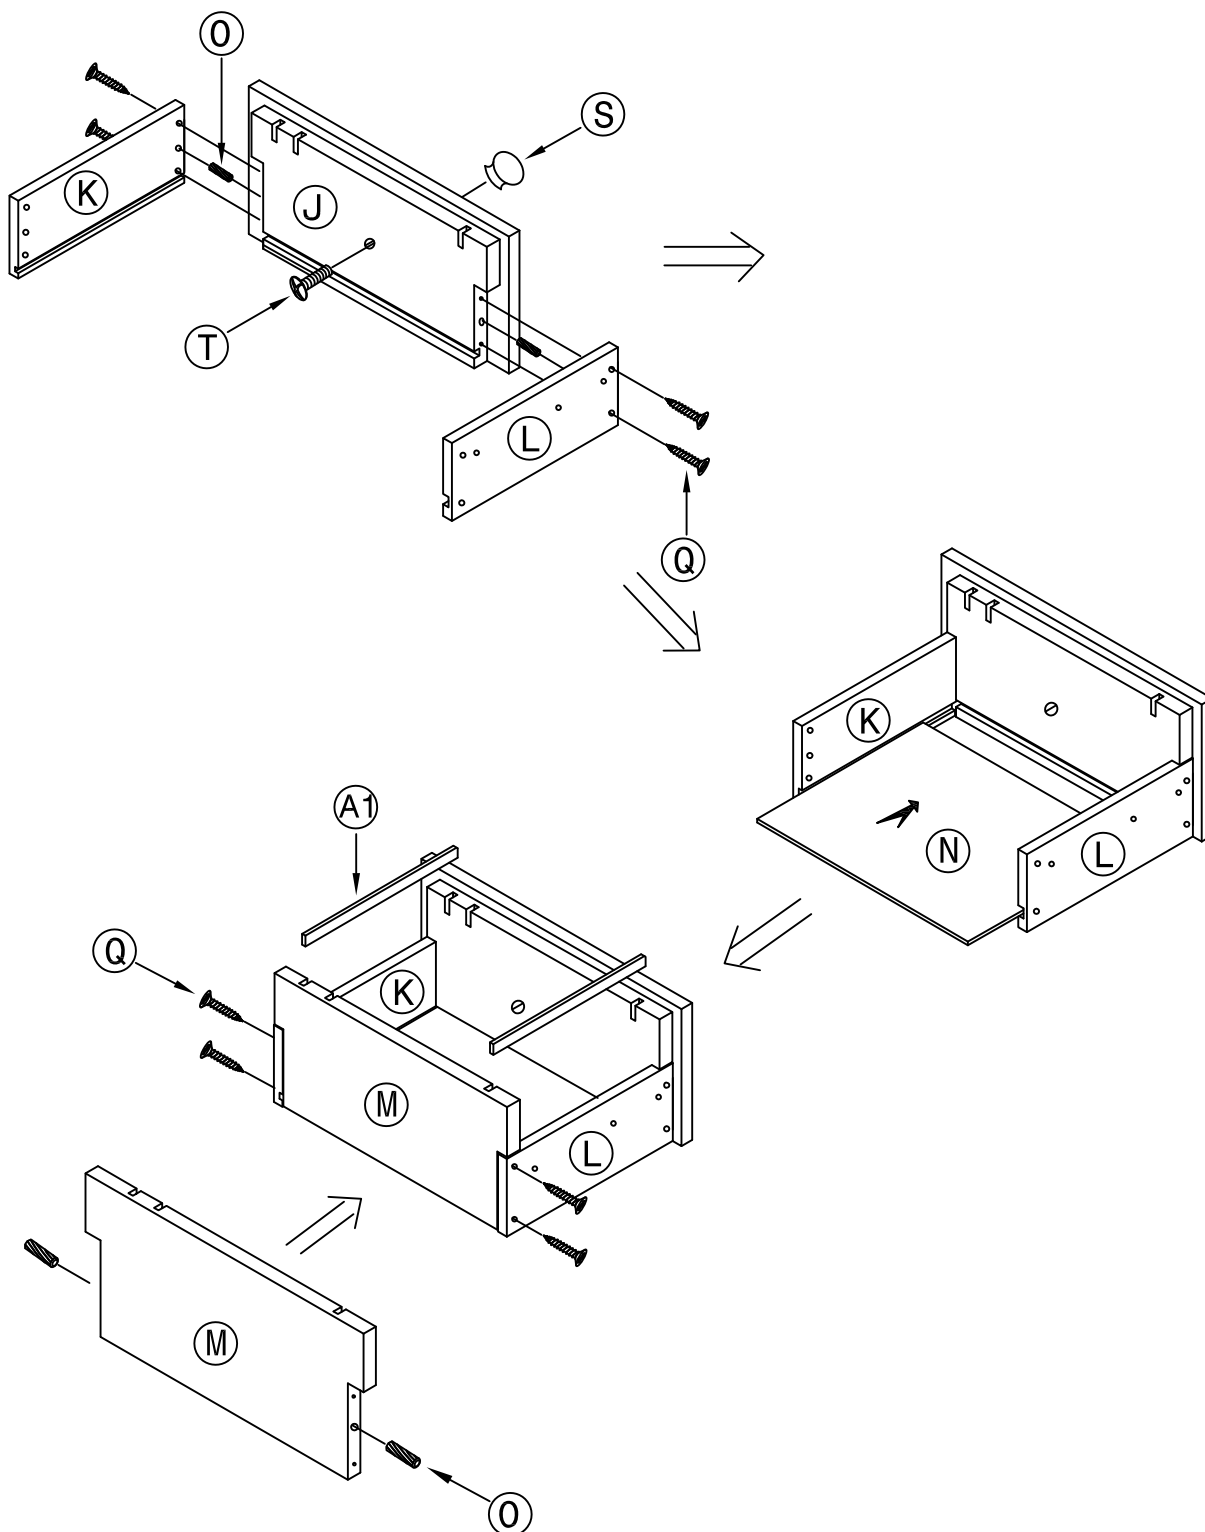


1) .ASSEMBLE THE DRAWER.

- INSERT DOWELS(O) INTO THE HOLES IN THE PANEL(J) AND ATTACH SIDE PANEL(K/L) USING SCREWS(Q) .
- ATTACH THE KNOB(S) TO FRONT DRAWER PANEL(J) USING SCREWS(T) .
- INSERT BOTTOM DRAWER PANEL(N) INTO THE SLOT IN SIDE DRAWER PANEL(K/L) .
- INSERT THE DOWELS(O) INTO THE HOLES IN THE BACK DRAWER PANEL(M) AND ATTACH USING SCREWS(Q) .
- INSERT THE FILE HANGER(A1) INTO THE CUT-OUT OF THE FRONT & BACK DRAWER PANELS .

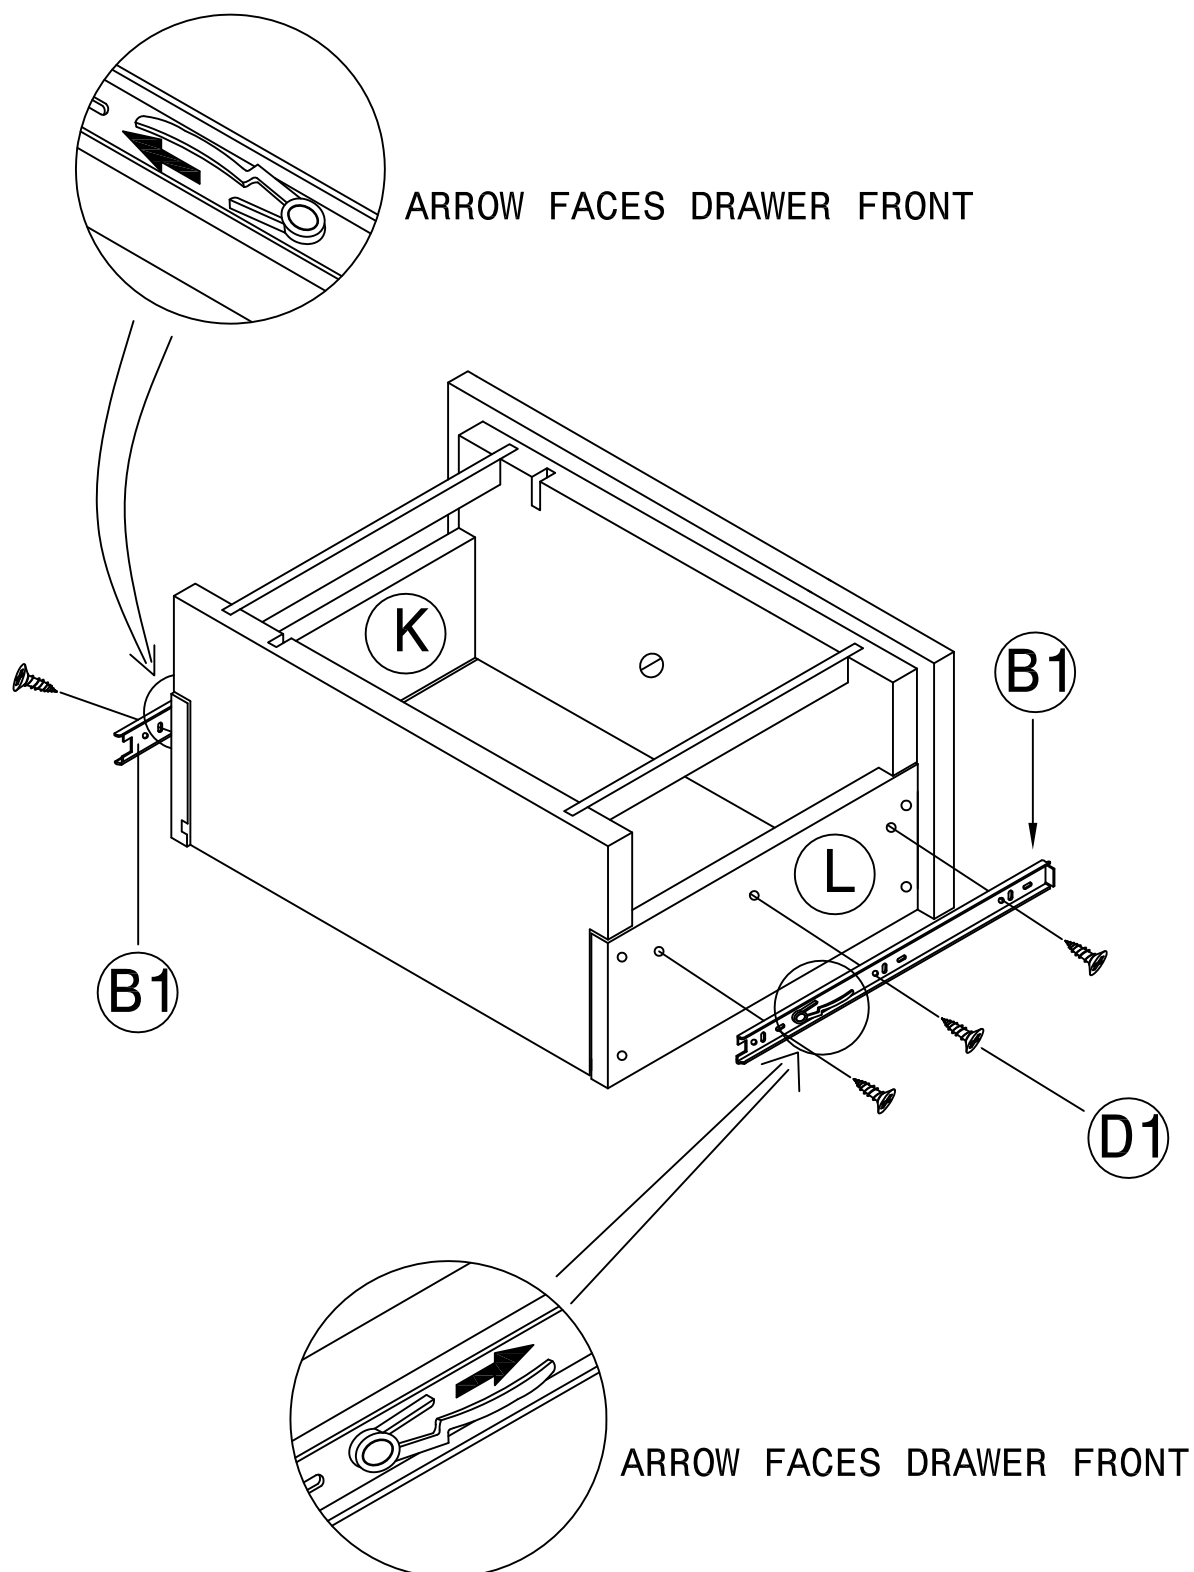


2) .ASSEMBLE THE INNER SLIDES(B1) .

- ATTACH INNER SLIDES(B1) TO DRAWER PANEL SIDE(K/L) USING 6 SCREWS(D1) .

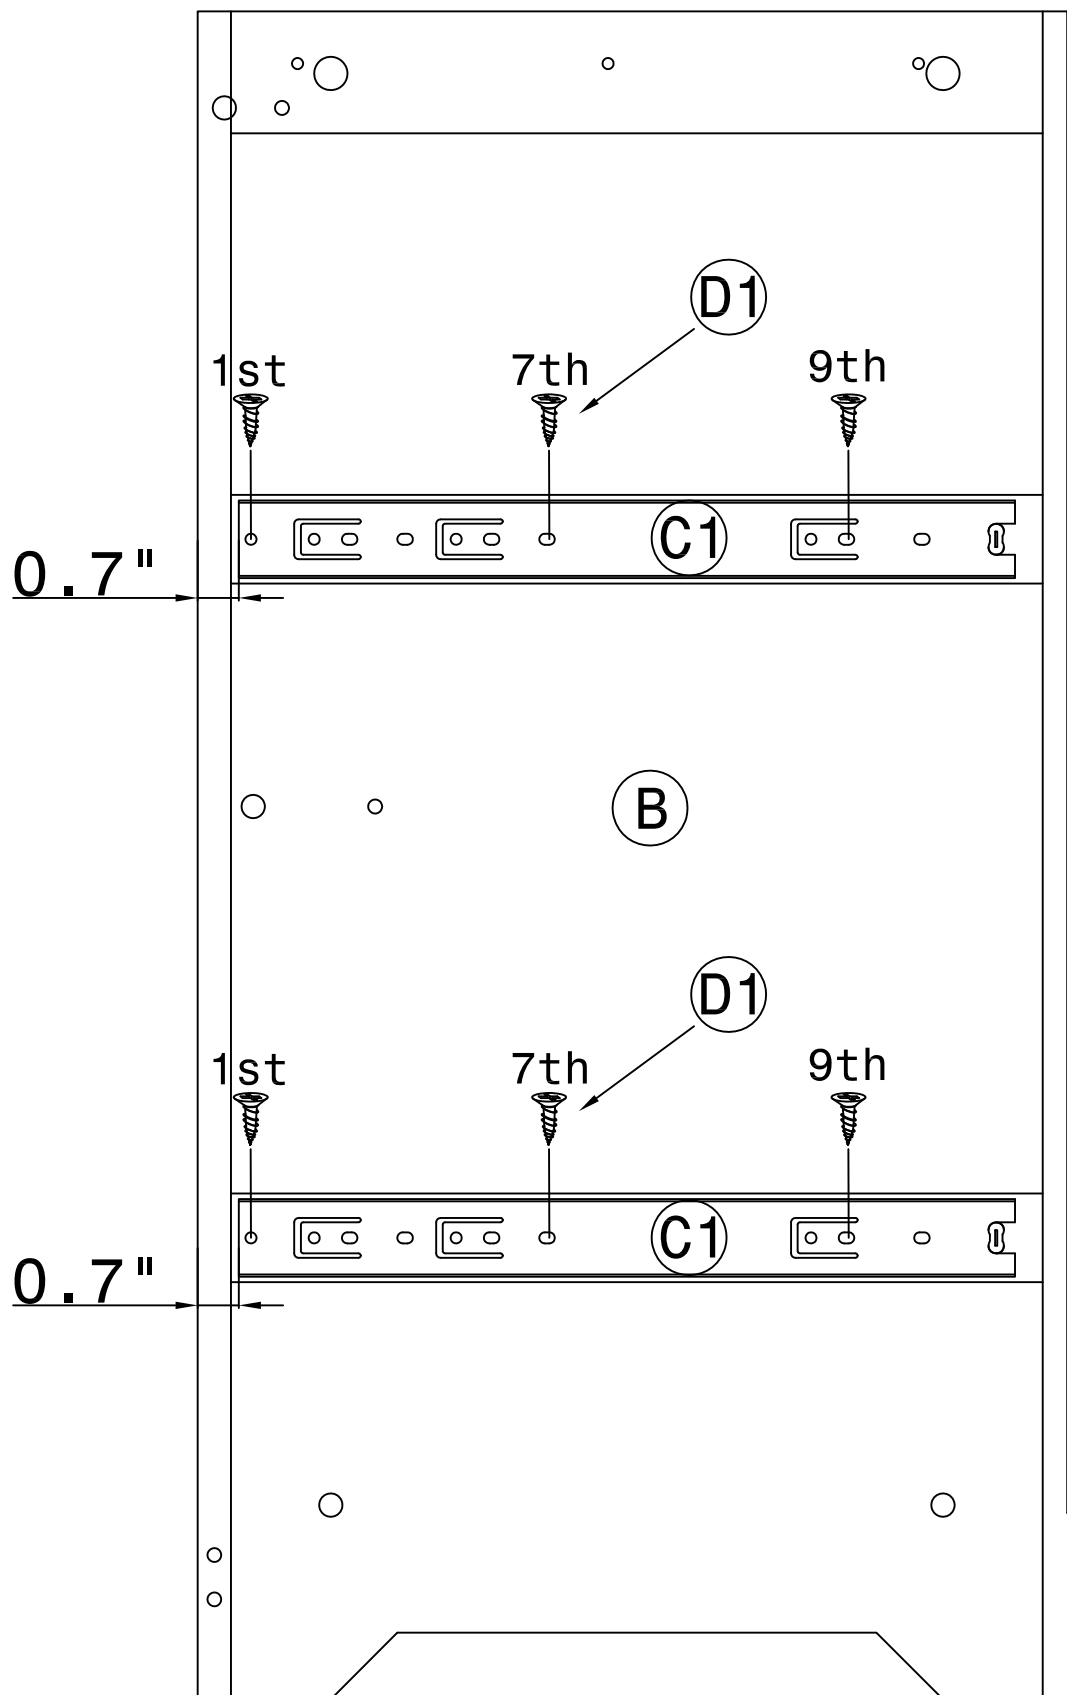


3) .ASSEMBLE THE OUTER SLIDE(C1).

●ATTACH THE 2 OUTER SLIDE(C1) TO SIDE PANEL(B) USING 6 SCREWS(D1).

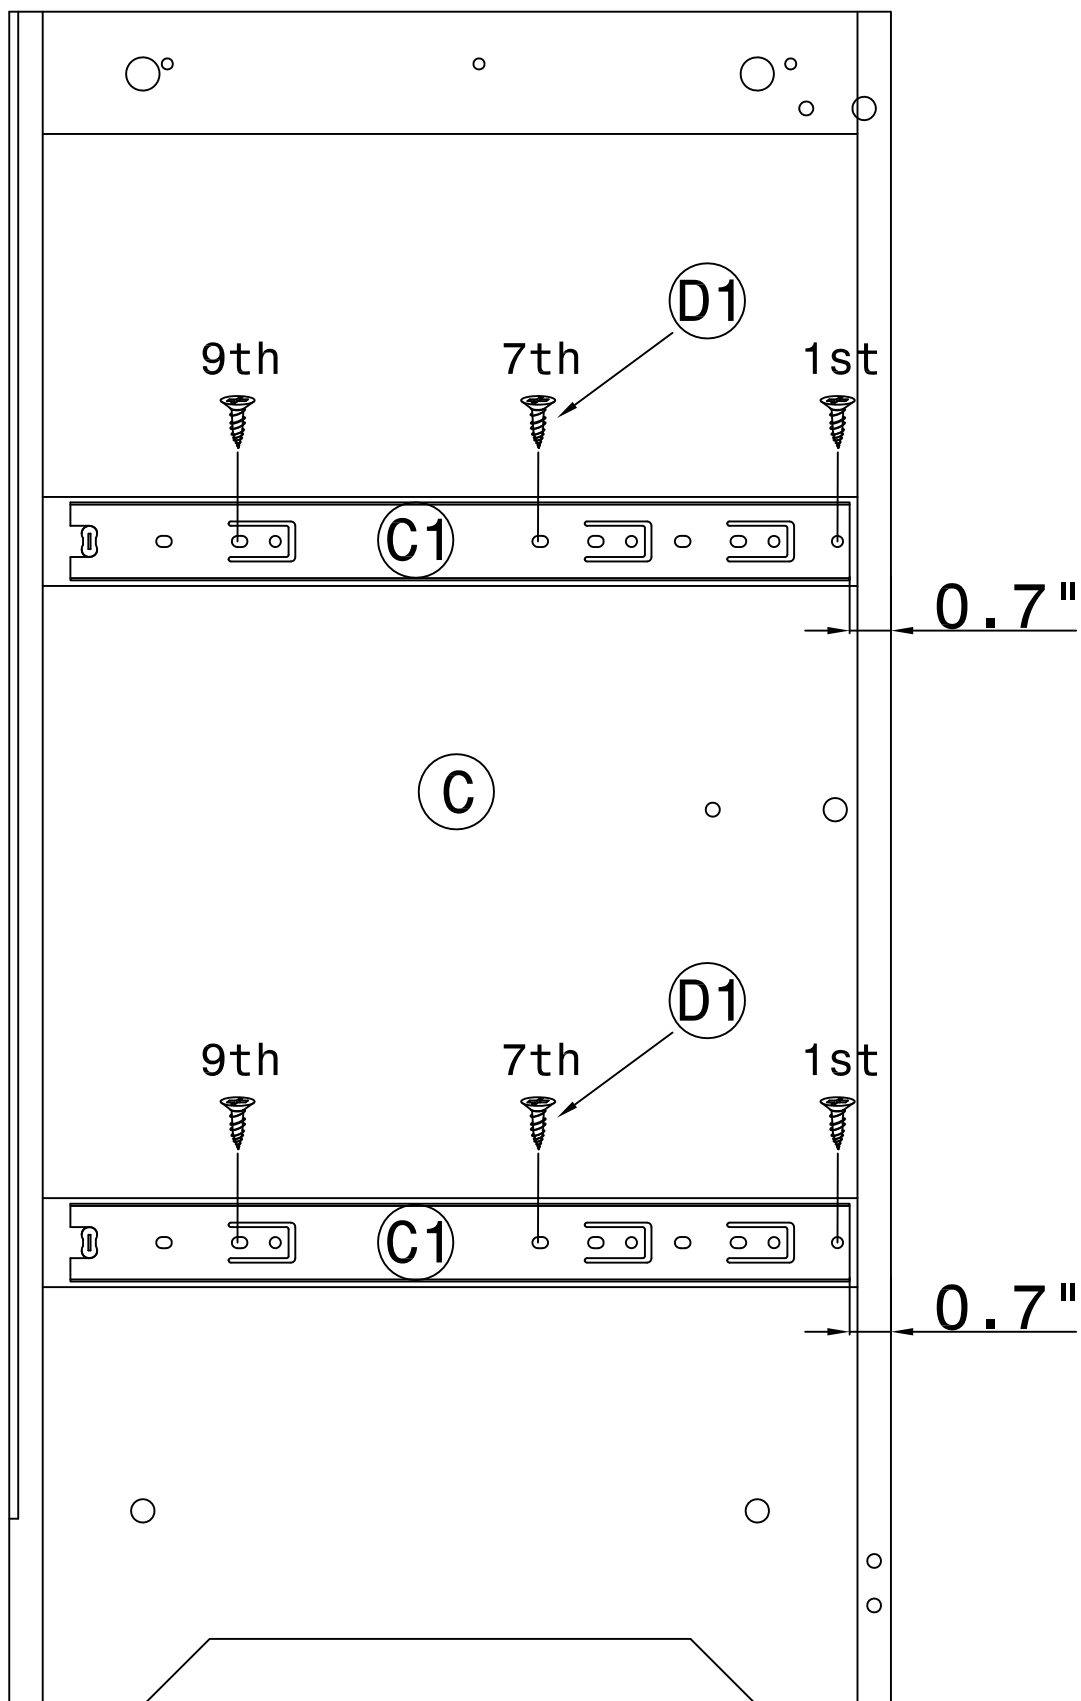


4). ASSEMBLE THE OUTER SLIDE(C1).

● ATTACH THE 2 OUTER SLIDE(C1) TO SIDE PANEL(C) USING 6 SCREWS(D1).

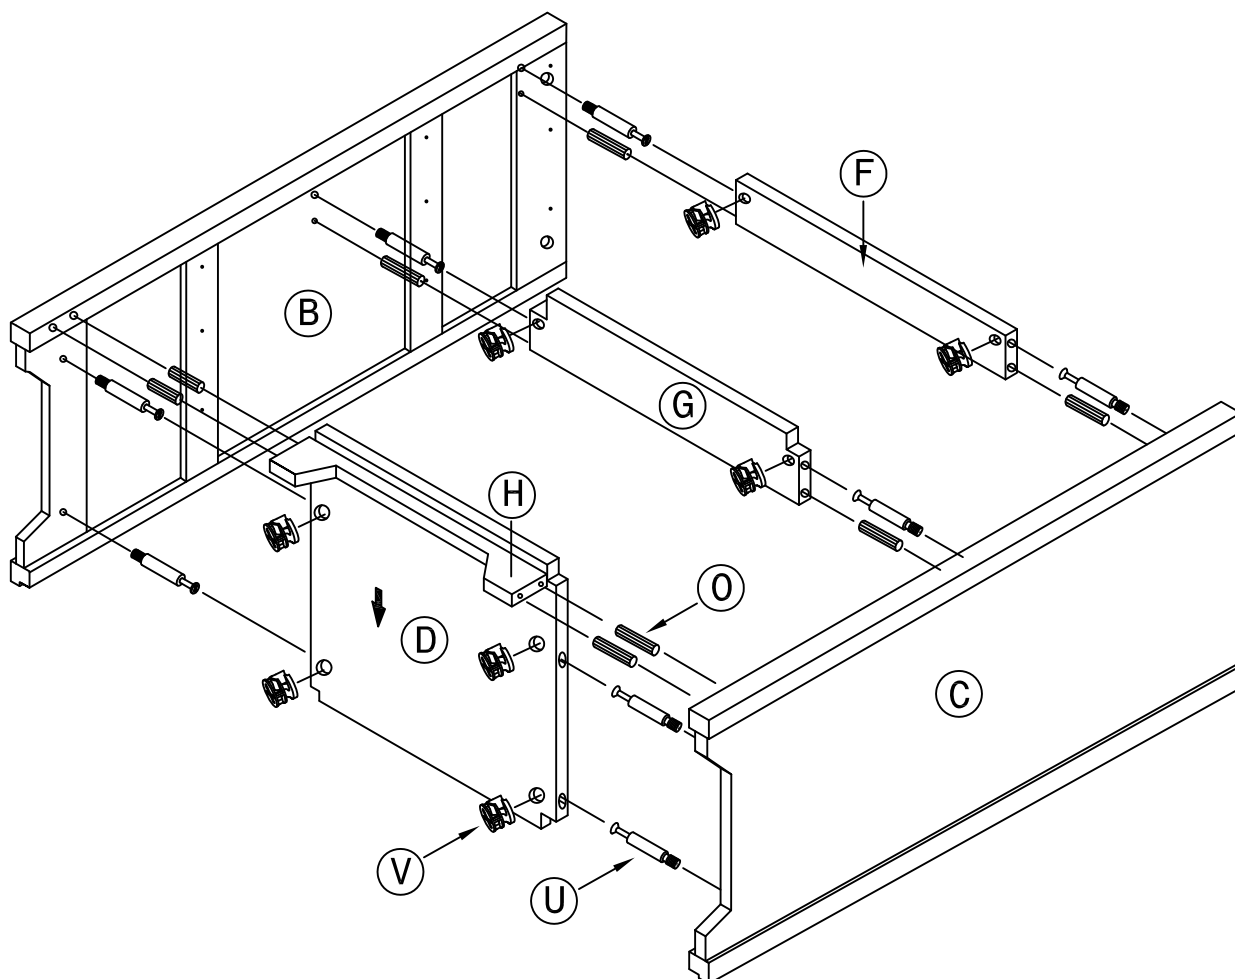


5) . ASSEMBLE SIDE PANEL(B/C) .

- INSERT 8 DOWELS(O) INTO THE HOLES IN THE ACROSS PANEL(F/G) AND LOW PANEL(H) .
- ROTATE 8 CAM-BOLTS(U) INTO THE HOLES IN THE SIDE PANEL(B/C) .
- PLACE CAM-BOLTS(U) INTO THE HOLES IN THE PANEL(F/G/D) AND ATTACH USING 8 CAM-LOCKS(V) .

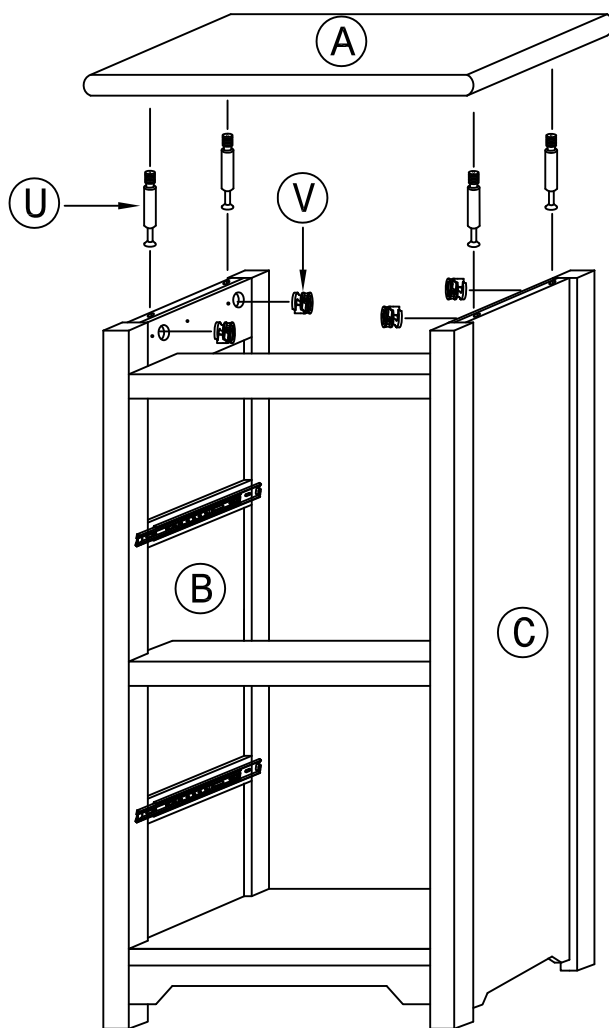


6) . ASSEMBLE THE TOP PANEL(A) .

- ROTATE 4 CAM-BOLTS(U) INTO THE HOLES IN THE TOP PANEL(A) .
- PLACE CAM-BOLTS(U) INTO THE HOLES IN THE SIDE PANEL(B/C) AND ATTACH USING 4 CAM-LOCKS(V) .

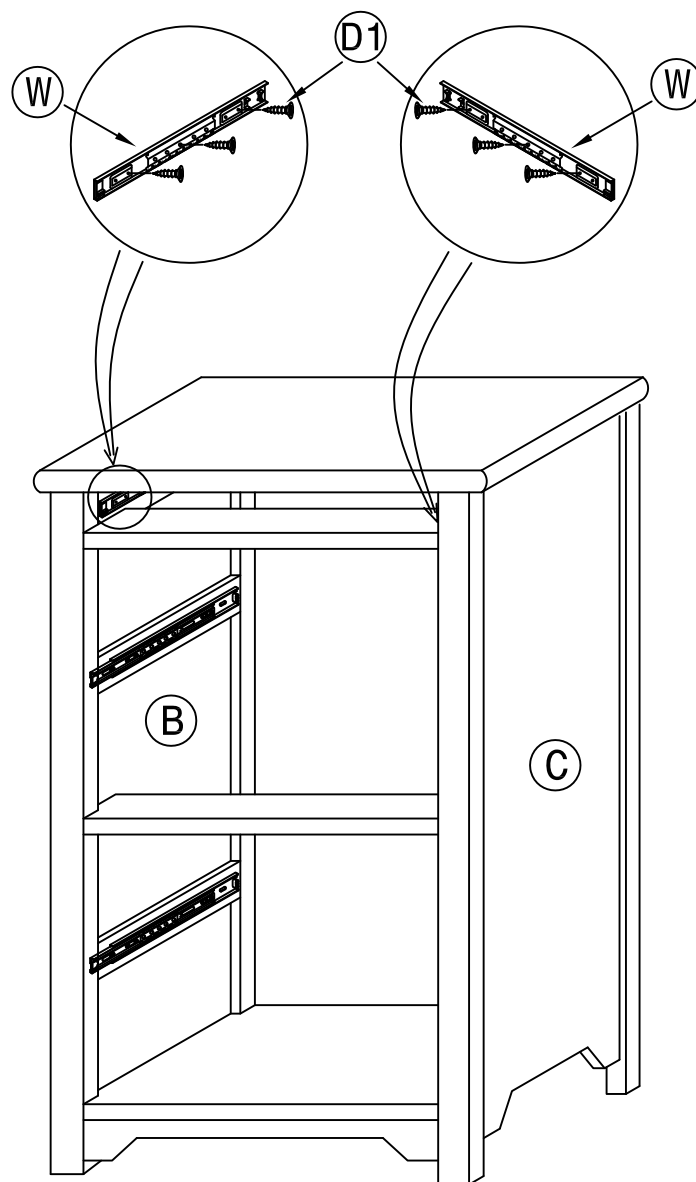


7) . ASSEMBLE THE OUTER SLIDES(W) .

- ATTACH THE 2 OUTER SLIDES(W) TO SIDE PANEL(B/C) USING 6 SCREWS(D1) .

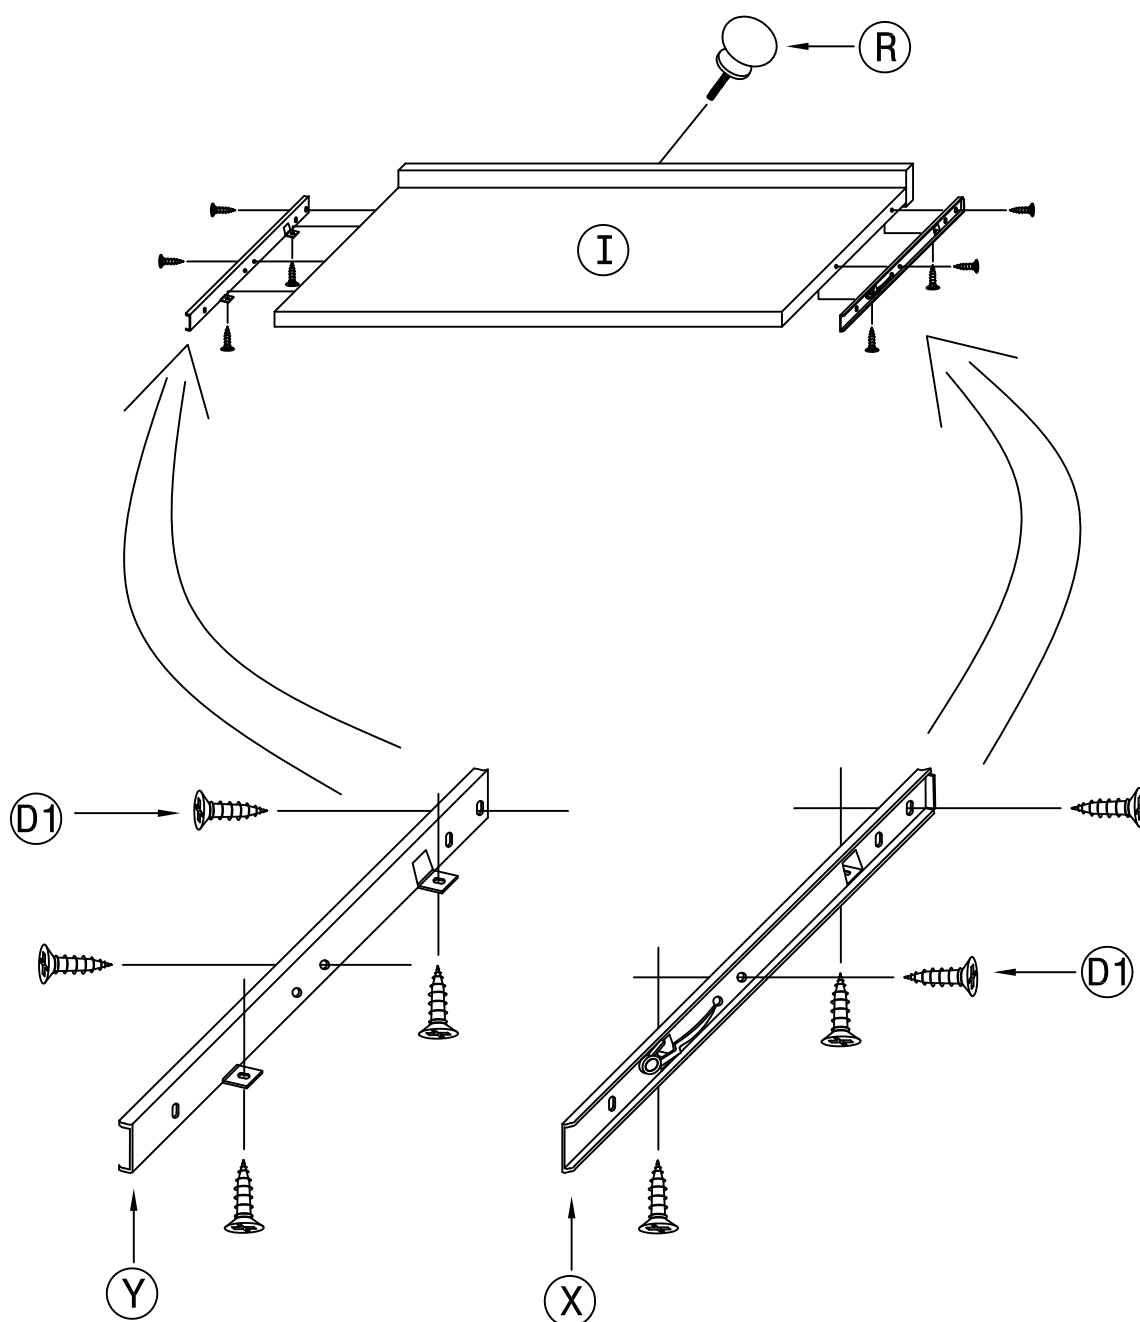


8) . ASSEMBLE THE SLIDE PANEL(I).

- ATTACH LEFT/RIGHT INNER SLIDE(X/Y) TO SLIDE PANEL(I) USING 8 SCREWS(D1).
- ROTATE THE KNOB(R) INTO THE HOLES IN THE SLIDE PANEL(I).

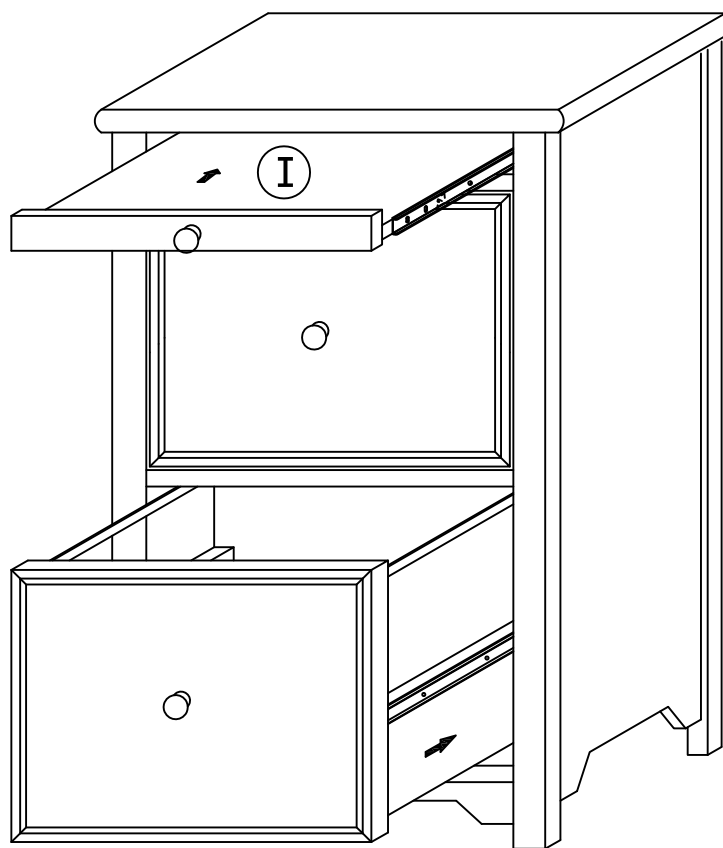

9) . ASSEMBLE THE DRAWERS.


- INSERT THE SLIDE PANEL(I) INTO THE OUTER SLIDE.
- SLIDE THE DRAWERS INTO THE OUTER SLIDE.

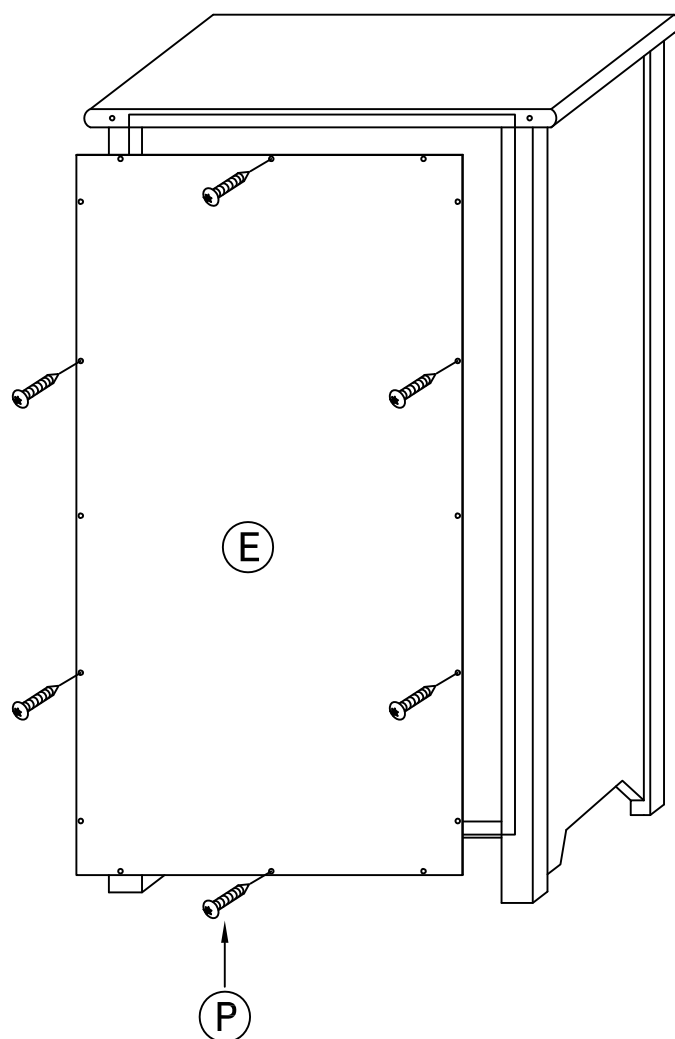

10) . ASSEMBLE THE BACK PANEL(E) .

- ATTACH THE BACK PANEL(E) TO TOP/BOTTOM/SIDE PANEL USING SCREWS(P) .

- I** • ATTACH 2 HOOKS(E1) USING 2 SCREWS(Q) IN THE
PREDRILLED HOLES OF REAR TOP PANEL.

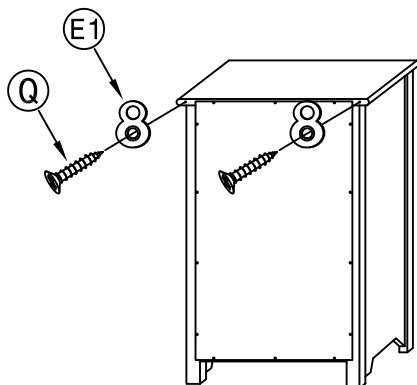

- II** • DRILL TWO HOLES INTO WALL, PLEASE REFER TO TOP PANEL'S HOLES DISTANCE AND HEIGHT.
• PUT 2 HANGERS(F1) INTO HOLES IN WALL AND ROTATE 2 SCREWS(G1) INTO HANGERS(F1).

